


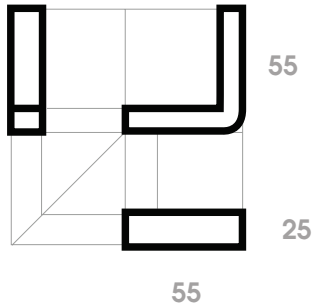


mont


robe hook



toilet roll holder

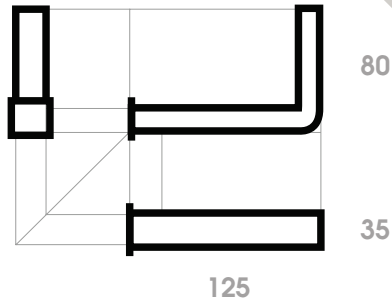

hand towel rail

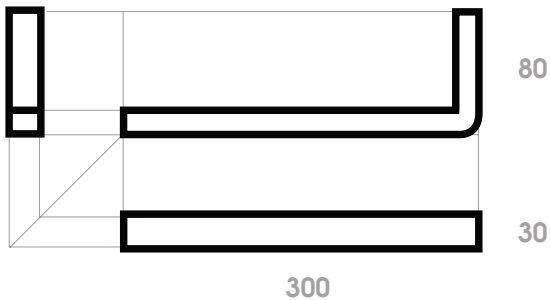

SPECIFICATIONS:

RECOMMENDED USE

RESIDENTIAL & COMMERCIAL


MATERIALS

304 S/S

SPARE ROLL HOLDER INSTALLATION INSTRUCTIONS:

Drill 11mm clearance hole through tile or wall lining (if required). Drill 7mm hole into nogging. Ensure plastic washer is located on the screw. Tighten grub screw on to lagscrew first. Wind thread into the drilled hole.


Alternatively can be installed horizontally as a hand towel rail.

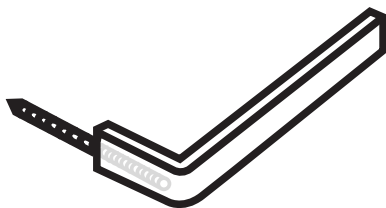

NOTE: Must be mounted a minimum of 350mm above floor with 350mm clearance around it for installation, unless being fixed to a vanity with a 10mm nut to inside of cabinet.

ROBE HOOK INSTALLATION INSTRUCTIONS:

Drill 6.5mm clearance hole through tile or wall lining (if required). Drill 4mm hole into nogging. Ensure plastic washer is located on the screw. Tighten grub screw on to lagscrew first. Wind thread into the drilled hole.

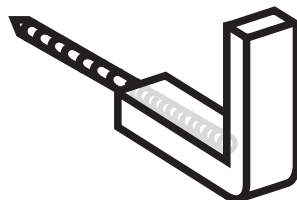

TOILET ROLL HOLDER INSTALLATION INSTRUCTIONS:

Drill 11mm clearance hole through tile or wall lining (if required). Drill 7mm hole into nogging. Ensure plastic washer is located on the screw. Tighten grub screw on to lagscrew first. Wind thread into the drilled hole.

