



SLIDING SCREEN FITTING INSTRUCTIONS – SL3

Components: SFK-SL3

- | | | |
|-----|---|--------------------------|
| 1 x | Bag 1 – small & large hex keys | <input type="checkbox"/> |
| 1 x | Bag 11 – Packers | <input type="checkbox"/> |
| 1 x | Bag 109 – End Connector Channel and spacer | <input type="checkbox"/> |
| 1 x | Bag 111 – End connector Channel | <input type="checkbox"/> |
| 1 x | Handles Set 'NF' SL | <input type="checkbox"/> |
| 1 x | Roller Set | <input type="checkbox"/> |
| 1 x | Clear Silicon | <input type="checkbox"/> |
| 1 x | Blue Masking Tape | <input type="checkbox"/> |
| 1 x | Bumper Pack (6) | <input type="checkbox"/> |
| 1 x | BAG-GB-B | <input type="checkbox"/> |
| 1 x | BAG-GB-W | <input type="checkbox"/> |
| 1 x | Screen Fitting Instructions | <input type="checkbox"/> |

Other equipment required:

- | | |
|--------------------------|-------------------------------|
| <input type="checkbox"/> | No 1 Square Drive Screwdriver |
| <input type="checkbox"/> | Caulking Gun |
| <input type="checkbox"/> | Drill |
| <input type="checkbox"/> | Level |
| <input type="checkbox"/> | Pencil |
| <input type="checkbox"/> | Tape Measure |
| <input type="checkbox"/> | Phillips screwdriver |

Checked by: _____

Date: _____

Included in with this shower package:

- | | | | | | |
|-----|--|--------------------------|-----|---|--------------------------|
| 1 x | Screen Fitting Kit – SFK-SL3 – as above | <input type="checkbox"/> | 1 x | Glass Receiver Channel – WCT | <input type="checkbox"/> |
| 1 x | Glass Door with 2 large holes - SL-B | <input type="checkbox"/> | 1x | Components below found in WCT: | <input type="checkbox"/> |
| 1 x | Plain Fixed Panel - 21-B | <input type="checkbox"/> | 1x | Bag18 – 8x6Gx40 Sq drive screws & wall plugs – 1x4mm drill bit | <input type="checkbox"/> |
| 1 x | Top Rail Brace – TRB-SL | <input type="checkbox"/> | 1x | Vertical Seal – SEAL-BULB | <input type="checkbox"/> |

TO MAKE SURE THAT YOU HAVE THE MOST UP TO DATE INSTRUCTIONS, SCAN THE FOLLOWING **QR CODE**. THIS WILL LINK YOU TO THE LATEST INSTRUCTION FILE ON OUR WEBSITE:



DO NOT INSTALL DAMAGED OR DEFECTIVE PRODUCTS

- It is the installer's responsibility to thoroughly check the glass panel prior to installation.
- Atlantis will take no responsibility for any glass panel that has been installed with a noticeable defect.

NOTE: a noticeable defect must be visible to the naked eye, in normal daylight conditions, standing at a distance of two meters.

Any imperfection that is not visible within the above noted parameters will not be accepted by Atlantis to be a defective product, and installation can proceed as usual.

PLEASE NOTE: Stand glass upright at all times. Keep glass panels level with the floor to avoid damaging corners.


NO RESPONSIBILITY WILL BE TAKEN BY ATLANTIS FOR ANY GLASS BREAKAGES OR CHIPPED EDGES.

GLASS RECEIVER CHANNEL MUST BE INSTALLED ONTO THE WATERPROOFING BEFORE THE WALLS ARE TILED




Installer – When Architectural Finish is fitted to base. Trim the internal leg off the wall channel to adequately clear the base surface. Ensure the wall channel interlocks correctly with the base.

1. Choose the door direction.

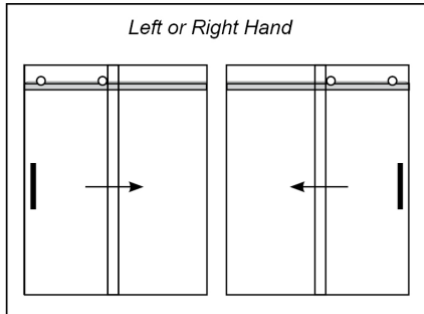


2. **1 x Glass Receiver Channel**


Position the glass receiver channel over the base glazing channel. The channel will be located on the fixed panel side only. Use a straight edge and mark the wall to indicate where the wall channel is plumb.

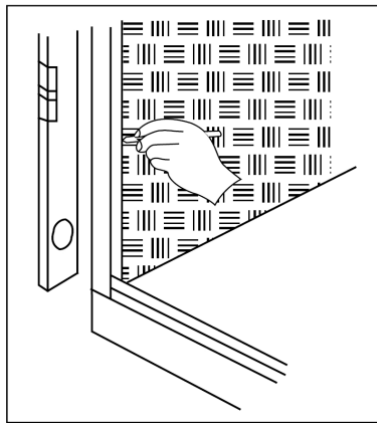


3. Apply a silicon seal to full length of channel. Silicon used must be compatible with anodised aluminium as well as the waterproofing being used.

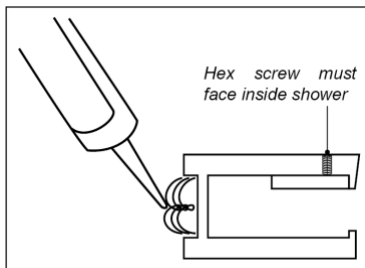


4. Ensure the glass receiver channel is located firmly over the base glazing channel. The machine recess in the wall glazing channel must firmly locate over the base glazing channel.

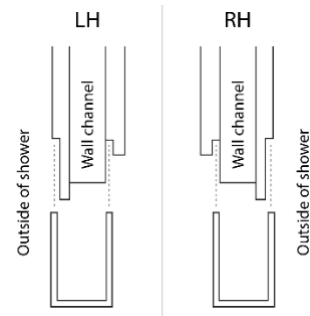

5. Locate the framing timber. Use the 4mm drill bit to drill holes through the glass receiver channel. Fix four screws through the channel in the wall framing (use wall plugs if required **BAG18**).

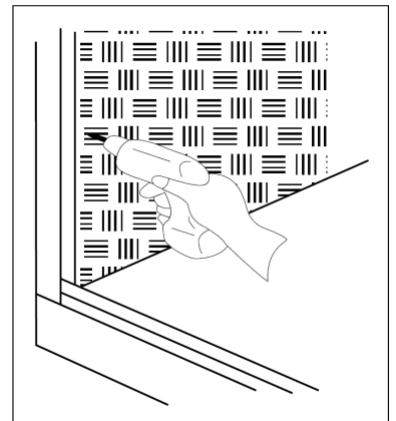


6. Apply a continuous bead of silicon to the full length of the channel and waterproofing, indicated by the dark line (inside channel).

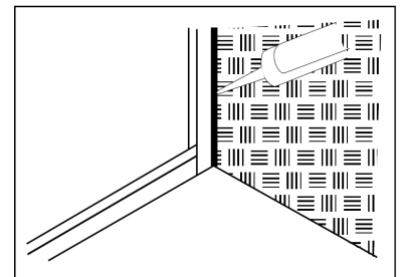


7. INSTALLATION OF TOP RAIL BRACE END CONNECTOR CHANNELS AND SPACER

Fix the top rail brace end connector channel and spacer (**BAG108SL**) 120mm down from top of glass receiver channel as shown. Detail shown below. **Must be accurate.** 120mm from top of wall channel to top of end connector channel.

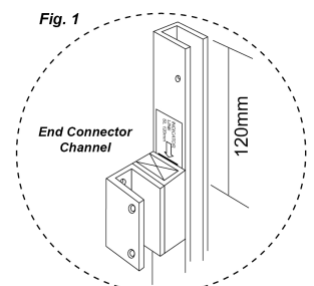

8. INSTALLATION OF SECOND END CONNECTOR CHANNEL

Carefully mark out and position the second end connector channel (**BAG110**) directly to the waterproofing. Ensure the two top rail brace end connector channels are level to each other and parallel to the base glazing channel.

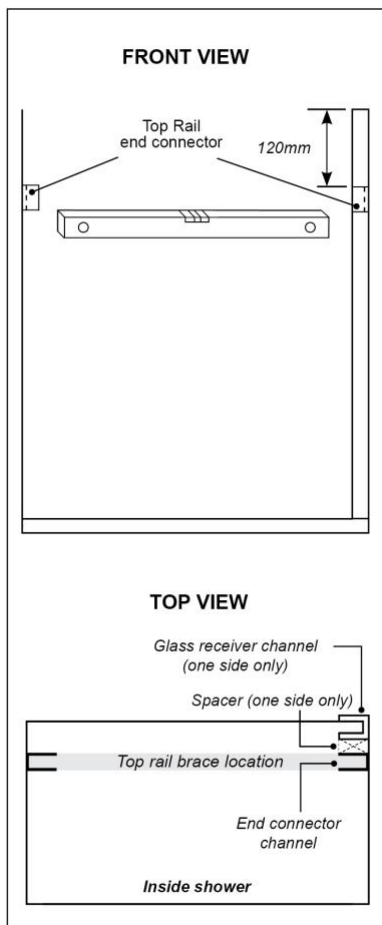


Ensure the two top rail brace end connector channels are level to each other and parallel to the base glazing channel.


9. TOP RAIL BRACE INSTALLATION

It is recommended that the top rail brace is fitted prior to tiling. AVOID SCRATCHING.

Trim to length if necessary. Slide into the end connector channels. Drill into CSK holes provided in end connector channel. Fix with the short CSK screws.

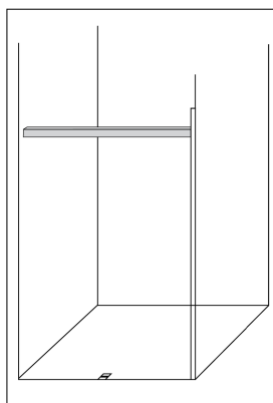


10. HANDLE INSTALLATION

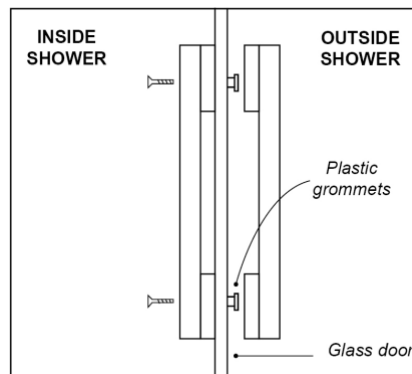


Assemble handles as shown. Use the 3mm Hex Key supplied with handle set.

11. ROLLER SET ASSEMBLY TO GLASS DOOR

Ensure the direction of the door is correct. Fit the plastic grommet through the glass first (note direction of grommet). Tighten with the 4mm Hex Key supplied.

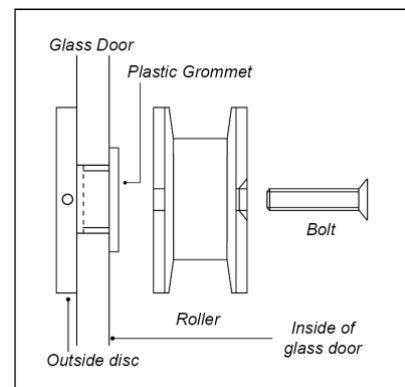


12. Protect the top rail brace outside face with the blue tape supplied. Stand outside the shower. Lift the door, **SL B** and place rollers onto the top rail brace. At the same time locate the door into the bottom door guide. Adjust the door height and alignment by loosening the roller bolts and rotating the outside disc. Ensure the bottom of the door clears the floor tiles.

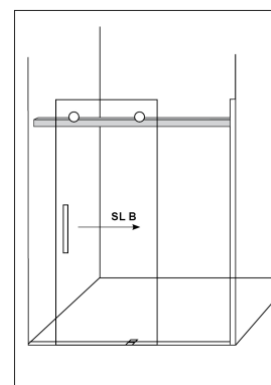


13. PREPARATION FOR GLASS INSTALLATION

Apply plastic packers into the base glazing channels in locations as shown.

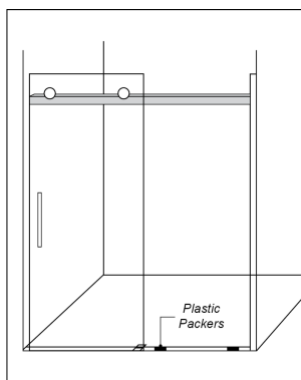


14. CRITICAL SEAL

Remove dust and dirt first. Seal the connection between the glass receiver channel and the base glazing channel with clear silicon, prior to the installation of panel 21 B.

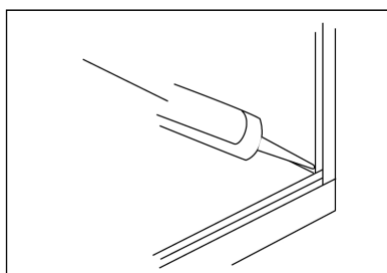

15. INSTALLATION OF FIXED PANEL

Locate the glass panel 21 B into the glazing channel. Add or remove packers in the base glazing channel as necessary.

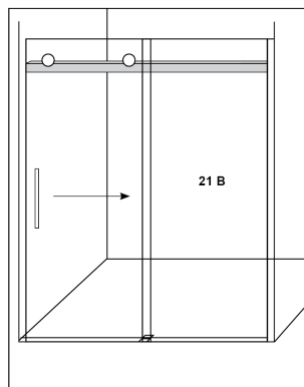

16. SLIDING DOOR GUIDE BLOCK


There are two options when installing a guide block. In each case ensure the guide block isn't too tight (must allow the glass to slide through it). Apply a small bead of silicon to the bottom and side of the block and then place into position – tight to the inside of the glazing channel. Use a 1 or 2mm packer on the outside of the glass to firmly hold the glass and guide block in place. Tape glass and block into place to ensure they don't move while silicon cures.

Guide Block Fitted Prior to Tiling


BASE LENGTH (L)	DISTANCE (X)
1100	530

1200	580
1300	630
1400	680

For RH Fixed Panel

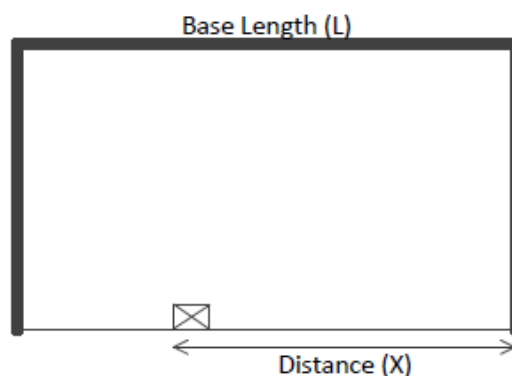


For LH Fixed Panel

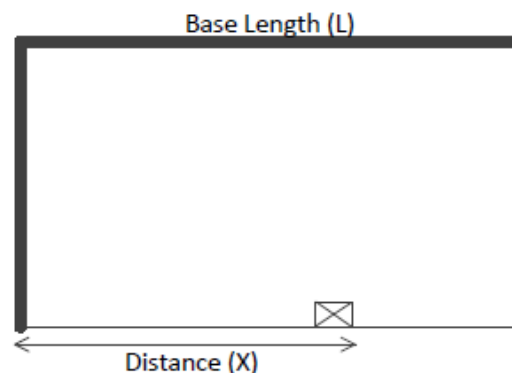


Guide Block Fitted after Tiling or on an Architectural Finish

Slide the door as far back in an open position as possible (be careful of it hitting the wall). Slip the sliding guide block under the door and locate it in line with the end of the fixed panel on the opening side. Ensure that the door is level. Silicone into place

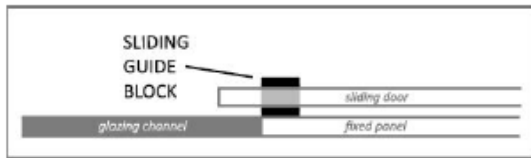


17. DOOR OPENING SILL INFILL

Trim Sill Infill to fit between wall and fixed panel. Apply a continuous bead of clear silicon to each inside face of the base channel. Ensure the ends of the Sill Infill are sealed and place into the base channel in the location as shown.




Apply a generous quantity of silicone at either end of the sill infill prior to final glass placement.

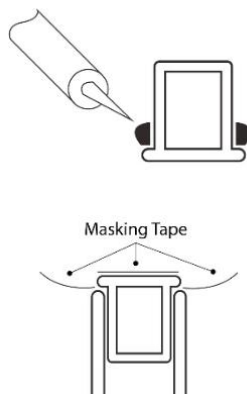

18. FASTENING GLASS

Secure the glass panel into the receiver channel by tightening hex screws firmly with hex key supplied. **(Do not overtighten).**

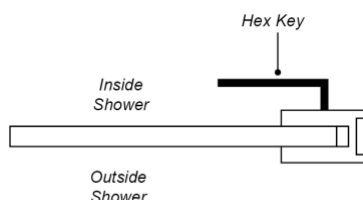

19. SILICON APPLICATION


Using the blue tape supplied, mask the glazing channel and glass at the intersections as shown.


Apply clear silicon to the inside and outside of the base and wall receiver channels.

Use spatula to remove provided to remove the excess silicon. Remove the masking tape immediately after application.

20. BUMPER APPLICATION

Apply 15mm area of primer to wall tiles in locations as shown by the dark dots. Place bumpers onto primer. Ensure the door slides to, and meets the centre of the bumpers. Alternatively use vertical seal supplied.

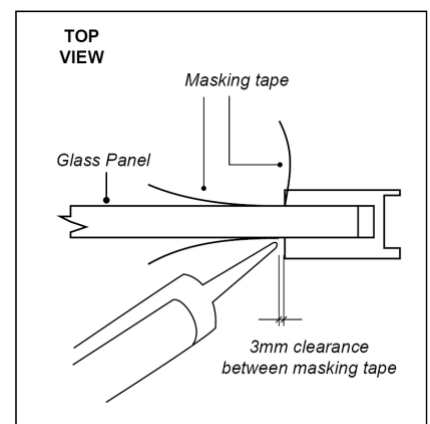

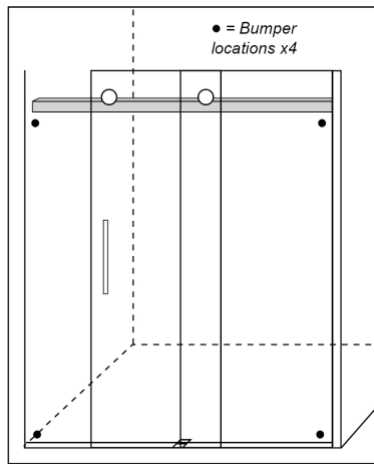




SLIDING SCREEN – GUIDE BLOCK

CODE - ABS-LQ-GB-LONG

Linea Quattro – Installed on base prior to tiling

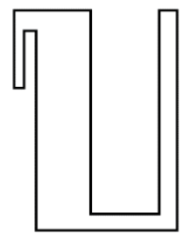

CODE - ABS-LQ-GB-SHORT

Linea Quattro – Installed after tiling or on an Architectural Finish when installing screens



CODE - ABS-EI-GB-WHITE / BLACK

Ebony & Ivory – Installed on base when installing screens

